



PRODUCT


USE INSTRUCTIONS



Ordering code: 009M91

Part number: FNI MBR-106-104-D64

64 DI/DO NPN adaptive
IP20 module user manual

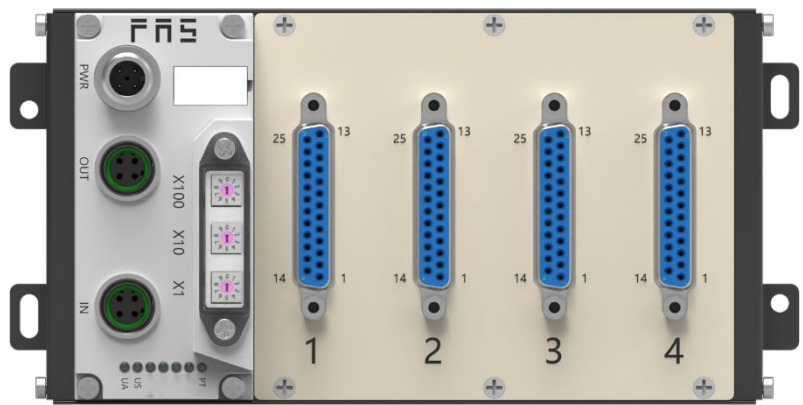

[Contents](#)

Security	4
■ Expected use	4
■ Installation and start-up	4
■ Corrosion resistance	4
■ Dangerous voltage	4
1. Getting Started Guide	6
1.1 Module overview	7
1.2 Mechanical connection	7
1.3 Electrical connection	7
1.3.1 Power interface(A-coded)	7
1.3.2 Network Interface(D-coded)	7
1.3.3 Signal port(DB25)	8
1.3.4 IP20 module wiring method	9
2. Technical data	10
2.1. Size	10
2.2 Mechanical data	10
2.3 Operating conditions	10
2.4 Electrical data	10
2.5 Network port	11
2.6 Function indicator	11
3. Integrated	12
3.1 Module configuration	12
3.1.1 Dial setting	12
3.1.2 Baud rate and parity settings	12
3.2 Data Mapping	13
3.2.1 Output coil A1 -A16	13
3.2.2 Discrete inputs I1 -I16	14
3.2.3 Coil output holding register (readable and writable)	15
3.2.4 Coil status input register (read only) (read input)	15
3.2.5 Short circuit overcurrent input status holding register (read only)	16
3.2.6 Fault reset holding register (write only)	16
3.2.7 Parameter holding register (read only)	17
3.2.8 Integrated in Delta AS228T PLC	18
4. Appendix	22
4.1 Ordering Information	22

■ Expected use

This manual describes as decentralized input and output modules for connecting to an industrial network.

■ Installation and start-up

Precautions!

Installation and start-up may only be performed by trained personnel. A qualified individual is one who is familiar with the installation and operation of the product and has the necessary qualifications to perform such operations. Any damage caused by unauthorized operation or illegal and improper use is not covered by the manufacturer's warranty. The equipment operator is responsible for ensuring that appropriate safety and accident prevention regulations are observed.

■ Corrosion resistance

Precautions!

FNI modules generally have good chemical and oil resistance. When used in corrosive media (e.g. high concentrations of chemicals, oils, lubricants, coolants and other material media (i.e. very low water content), these media must be checked before the corresponding application material compatibility. If a module fails or is damaged due to this corrosive medium, a defect claim cannot be made.

■ Dangerous voltage

Precautions!


Disconnect all power before using the device!

■ General security

Debugging and inspection	Fault	Owner/operator obligations	Expected use
Before debugging, read the user manual carefully.	If the defect or equipment failure cannot be corrected, the operation of the equipment must be stopped to avoid damage that may be caused by unauthorized use.	This equipment is an EMC Class A compliant product. This device produces RF noise.	The warranty and limited liability statement provided by the manufacturer does not cover damage caused by: ·Unauthorized tampering ·Improper use operation ·The instructions provided in the user manual explain the use, installation and handling of discrepancies
This system cannot be used in an environment where the safety of personnel depends on the functionality of the equipment.	Only after the housing is fully installed can the intended use be assured.	The owner/operator must take appropriate precautions to use this equipment. This device can only use the power supply that matches this device, and can only connect cables approved for application.	

1. Getting started guide

1.1 Module overview

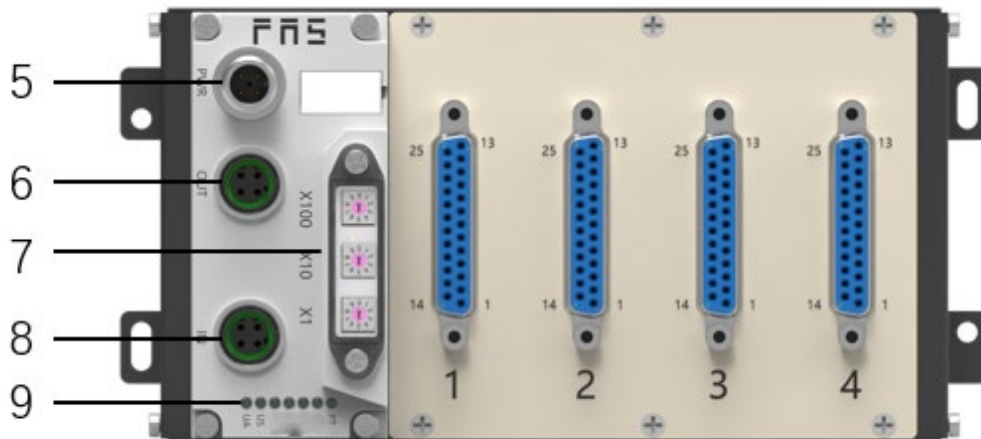


- | | | | |
|---|------------------------|---|-------------------------|
| 1 | 1-16 signal interface | 7 | DIP switch |
| 2 | 17-32 signal interface | 8 | R485 input port |
| 3 | 33-48 signal interface | 9 | Module status indicator |
| 4 | 49-64 signal interface | | |
| 5 | Power supply interface | | |
| 6 | R485 output po | | |

1.2 Mechanical connection

The module is installed using 4 M4 bolts or DIN35 rail snaps.


1.3 Electrical connection

1.3.1 Power interface (A-coded)

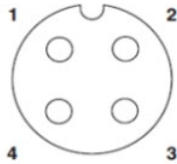

Pin	Function	Describe
1	Ua+	+24V(Brown)
2	Ua-*	0V(White)
3	Us+	+24V (Blue)
4	Us-*	0V(Black)


Power interface

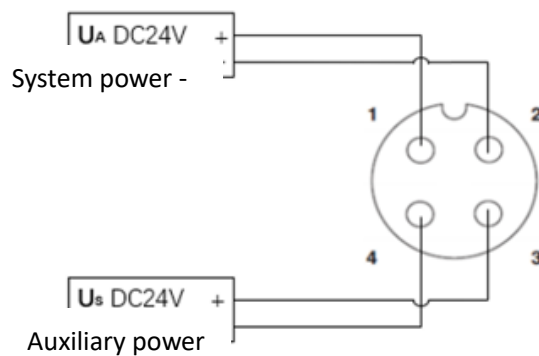

Notes:

1. It is recommended to provide US power and UA power separately.
2. The total current of Actuator power supply is <4A, and the total current of Bus power supply is <1A;
3. The FE connection from the housing to the machine must be low impedance and as short as possible.

1.3.2 Network Interface (D-coded)

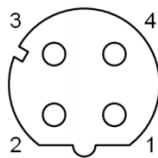


Pin	Function	
1	-	-
2	A+	RS485+
3	-	-
4	B-	RS485-

Note:

Unused I/O port sockets must be covered with end caps to meet IP67 protection rating.

1.3.3 Signal port (DB25)

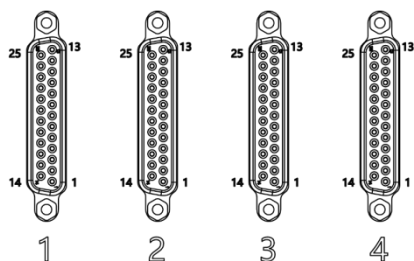


Wiring definition

Shape	Needle number	Signal name
	1	Signal 0
	2	Signal 2
	3	Signal 4
	4	Signal 6
	5	Signal 8
	6	Signal 10
	7	Signal 12
	8	Signal 14
	9	NC
	10	NC
	11	NC
	12	0V (for input)
	13	24V (for output)
	14	Signal 1
	15	Signal 3
	16	Signal 5
	17	Signal 7
	18	Signal 9
	19	Signal 11
	20	Signal 13
	21	Signal 15
	22	NC
	23	NC
	24	0V (for input)
	25	24V (for output)

Notes:

1. Input and output signal types supported: three-wire NPN, two-wire NPN, dry contact;
2. Pin +24V single-channel output current maximum 500mA. Module total current <4A;
3. Total current of each 8 channels (1~8, 9~16) <1A.


1.3.4 IP20 module wiring method

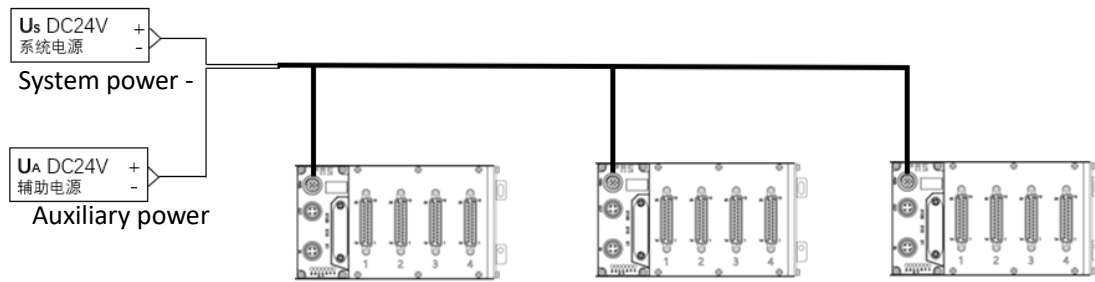

In independent power supply mode, the maximum current of each module can reach 4A

2 Technical data

2.1. Size

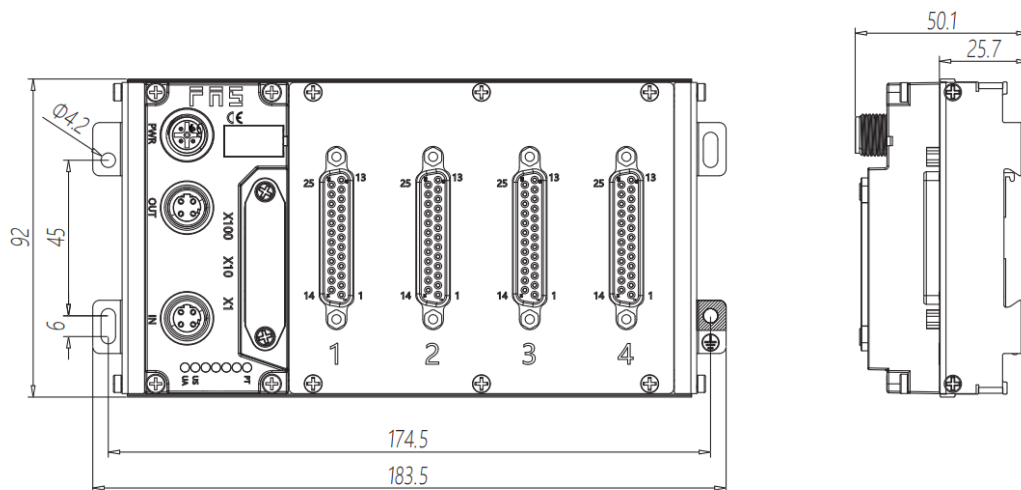

2.2

Mechanical data

Housing material	Aluminum shell
Housing grade complies with IEC 60529	IP20
Power interface	A-Code
Input port/output port	DB25
Dimensions (W*H*D)	183.5mm*92mm*50.1mm
Installation type	Screw fixation or DIN35 rail mounting
Weight	About 670g

2.3 Operating conditions

Operating temperature	-5°C ~ 80°C
Storage temperature	-25°C ~ 85°C


2.4 Electrical data

Power supply voltage	18~30V DC, conform to EN61131-2
Voltage fluctuation	<1%
Input current when power supply voltage is 24V	<130mA

2.5 Network port

Ports	2 x 10Base-/100Base-Tx
Port connections	M12, D-Coded
IEEE 802.3 compliant cable types	Shielded twisted pair, minimum STP CAT 5/STP CAT 5e
Data transfer rates	10/100 M bit/s
Maximum cable lengths	100m
Flow control	Half-operating/full-operating (IEEE 802.3-PAUSE)

2.6 Function indicator

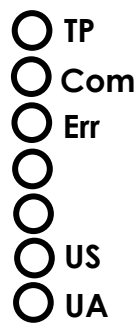

LED	Display	Function
PT	Green, flashing	Setting completed, waiting for setting
COM	Off	Waiting for connection
	Green, flashing	Communication successful, exchanging data
Err	Green	Input voltage normal
	Red, flashing	Input voltage low (< 18 V)
US	Green	Input voltage normal
	Red, flashing	Input voltage low (< 18 V)
UA	Green	Output voltage normal
	Red, flashing	Output voltage low (< 18 V)
	Red, solid	Output voltage does not exist (< 11 V)

3 Integrated

3.1 Module configuration

3.1.1 Dial setting

Node address (range 1-247): In the power-off state, turn the dial to the preset node address. Example:

Dip X100=0, X10=2, X1=5.

The node number is 25.

Note: The maximum node number is 247. After the dial is adjusted, it needs to be powered on again to take effect.

3.1.2 Baud rate and parity settings

For example: the baud rate to be set is 9600 NONE

1. Turn the dial to 988 in the power-off state,
2. After the PT light flashes after powering on, turn the dial to (210)
3. After waiting for 3 seconds, turn off the power and restore the dial to the original node address

Dialing instructions are as follows:

X100: fixed to 2, indicating setting the baud rate and parity

X10: indicates the baud rate index value

X1: number indicates the parity check index value

Dial code X10	Baud rate bps
0	4800
1	9600
2	19200
3	38400
4	115200
5	128000
6	115200
7	115200
8	115200
9	115200

Pull code X1	Check digit
0	NONE (no check)
1	ODD (odd check)
2	EVEN (even check)
3	NONE (no check)
4	NONE (no check)
5	NONE (no check)
6	NONE (no check)
7	NONE (no check)
8	NONE (no check)
9	NONE (no check)

3.2 Data mapping

3.2.1 Output coil A1 -A16

Coil address	PLC address bits	Coil Name	Read and write permissions	Coil address	PLC address bits	Coil Name	Read and write permissions
100	00101	A1	R/W	108	00109	A9	R/W
101	00102	A2	R/W	109	00110	A10	R/W
102	00103	A3	R/W	110	00111	A11	R/W
103	00104	A4	R/W	111	00112	A12	R/W
104	00105	A5	R/W	112	00113	A13	R/W
105	00106	A6	R/W	113	00114	A14	R/W
106	00107	A7	R/W	114	00115	A15	R/W
107	00108	A8	R/W	115	00116	A16	R/W

Coil address	PLC address bits	Coil Name	Read and write permissions	Coil address	PLC address bits	Coil Name	Read and write permissions
116	00117	A17	R/W	124	00125	A25	R/W
117	00118	A18	R/W	125	00126	A26	R/W
118	00119	A19	R/W	126	00127	A27	R/W
119	00120	A20	R/W	127	00128	A28	R/W
120	00121	A21	R/W	128	00129	A29	R/W
121	00122	A22	R/W	129	00130	A30	R/W
122	00123	A23	R/W	130	00131	A31	R/W
123	00124	A24	R/W	131	00132	A32	R/W

Coil address	PLC address bits	Coil Name	Read and write permissions	Coil address	PLC address bits	Coil Name	Read and write permissions
132	00133	A33	R/W	140	00141	A41	R/W
133	00134	A34	R/W	141	00142	A42	R/W
134	00135	A35	R/W	142	00143	A43	R/W
135	00136	A36	R/W	143	00144	A44	R/W
136	00137	A37	R/W	144	00145	A45	R/W
137	00138	A38	R/W	145	00146	A46	R/W
138	00139	A39	R/W	146	00147	A47	R/W
139	00140	A40	R/W	147	00148	A48	R/W

Coil address	PLC address bits	Coil Name	Read and write permissions	Coil address	PLC address bits	Coil Name	Read and write permissions
148	00149	A49	R/W	156	00157	A57	R/W
149	00150	A50	R/W	157	00158	A58	R/W

150	00151	A51	R/W	158	00159	A59	R/W
151	00152	A52	R/W	159	00160	A60	R/W
152	00153	A53	R/W	160	00161	A61	R/W
153	00154	A54	R/W	161	00162	A62	R/W
154	00155	A55	R/W	162	00163	A63	R/W
155	00156	A56	R/W	163	00164	A64	R/W

3.2.2 Discrete input I1 -I64

Input coil address	PLC address bits	Coil Name	Read and write permissions	Input coil address	PLC address bits	Coil Name	Read and write permissions
200	10201	I1	R	208	10209	I9	R
201	10202	I2	R	209	10210	I10	R
202	10203	I3	R	210	10211	I11	R
203	10204	I4	R	211	10212	I12	R
204	10205	I5	R	212	10213	I13	R
205	10206	I6	R	213	10214	I14	R
206	10207	I7	R	214	10215	I15	R
207	10208	I8	R	215	10216	I16	R

Input coil address	PLC address bits	Coil Name	Read and write permissions	Input coil address	PLC address bits	Coil Name	Read and write permissions
216	10217	I17	R	224	10225	I25	R
217	10218	I18	R	225	10226	I26	R
218	10219	I19	R	226	10227	I27	R
219	10220	I20	R	227	10228	I28	R
220	10221	I21	R	228	10229	I29	R
221	10222	I22	R	229	10230	I30	R
222	10223	I23	R	230	10231	I31	R
223	10224	I24	R	231	10232	I32	R

Input coil address	PLC address bits	Coil Name	Read and write permissions	Input coil address	PLC address bits	Coil Name	Read and write permissions
232	10233	I33	R	240	10241	I41	R
233	10234	I34	R	241	10242	I42	R
234	10235	I35	R	242	10243	I43	R
235	10236	I36	R	243	10244	I44	R
236	10237	I37	R	244	10245	I45	R
237	10238	I38	R	245	10246	I46	R
238	10239	I39	R	246	10247	I47	R
239	10240	I40	R	247	10248	I48	R

Input coil address	PLC address bits	Coil Name	Read and write permissions	Input coil address	PLC address bits	Coil Name	Read and write permissions
248	10249	I49	R	256	10257	I57	R
249	10250	I50	R	257	10258	I58	R
250	10251	I51	R	258	10259	I59	R
251	10252	I52	R	259	10260	I60	R
252	10253	I53	R	260	10261	I61	R
253	10254	I54	R	261	10262	I62	R
254	10255	I55	R	262	10263	I63	R
255	10256	I56	R	263	10264	I64	R

3.2.3 Coil output holding register (readable and writable)

Register	PLC address bits	BIT															
		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
10H	40017	A16	A15	A14	A13	A12	A11	A10	A9	A8	A7	A6	A5	A4	A3	A2	A1
11H	40018	A32	A31	A30	A29	A28	A27	A26	A25	A24	A23	A22	A21	A20	A19	A18	A17
12H	40019	A48	A47	A46	A45	A44	A43	A42	A41	A40	A39	A38	A37	A36	A35	A34	A33
13H	40020	A64	A63	A62	A61	A60	A59	A58	A57	A56	A55	A54	A53	A52	A51	A50	A49

3.2.4 Coil status input register (read only) (read input)

Register	PLC address bits	BIT															
		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
20H	30033	I16	I15	I14	I13	I12	I11	I10	I9	I8	I7	I6	I5	I4	I3	I2	I1
21H	30034	I32	I31	I30	I29	I28	I27	I26	I25	I24	I23	I22	I21	I20	I19	I18	I17
22H	30035	I48	I47	I46	I45	I44	I43	I42	I41	I40	I39	I38	I37	I36	I35	I34	I33
23H	30036	I64	I63	I62	I61	I60	I59	I58	I57	I56	I55	I54	I53	I52	I51	I50	I49

3.2.5 Short circuit overcurrent input status holding register (read only)

		BIT
--	--	-----

Register	PLC address bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
30H	40049	A16	A15	A14	A13	A12	A11	A10	A9	A8	A7	A6	A5	A4	A3	A2	A1
31H	40050	A32	A31	A30	A29	A28	A27	A26	A25	A24	A23	A22	A21	A20	A19	A18	A17
32H	40052	A48	A47	A46	A45	A44	A43	A42	A41	A40	A39	A38	A37	A36	A35	A34	A33
33H	40053	A64	A63	A62	A61	A60	A59	A58	A57	A56	A55	A54	A53	A52	A51	A50	A49

Register	PLC address bits	BIT															
		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
30H	40049	A16	A15	A14	A13	A12	A11	A10	A9	A8	A7	A6	A5	A4	A3	A2	A1
31H	40050	A32	A31	A30	A29	A28	A27	A26	A25	A24	A23	A22	A21	A20	A19	A18	A17
32H	40052	A48	A47	A46	A45	A44	A43	A42	A41	A40	A39	A38	A37	A36	A35	A34	A33
33H	40053	A64	A63	A62	A61	A60	A59	A58	A57	A56	A55	A54	A53	A52	A51	A50	A49

3.2.6 Fault reset holding register (write only)

Register	PLC address bits	Number of registers	Remark
0040H	40065	1	Write 005A first, then reset all faults within 500ms.


3.2.7 Parameter holding register (read only)

Register	PLC address bits	Function	Value range	Remark
0050H	40081	Device address	1-254	0: Broadcast address
0051H	40082	Baud rate index value	0-9	
0052H	40083	Parity index value	0-5	
0053H	40097	Product model		71:Indicates 009M71


0054H	40101	Software version		102001:V1.2.1
-------	-------	---------------------	--	---------------

3.2.8 Integration in Delta AS228T PLC


1. Before integrating the device into the PLC, first connect the module communication line to the COM1 port of the PLC. The corresponding relationship is A and +, B and;
2. Double-click "HWCONFIG" in the project tree;

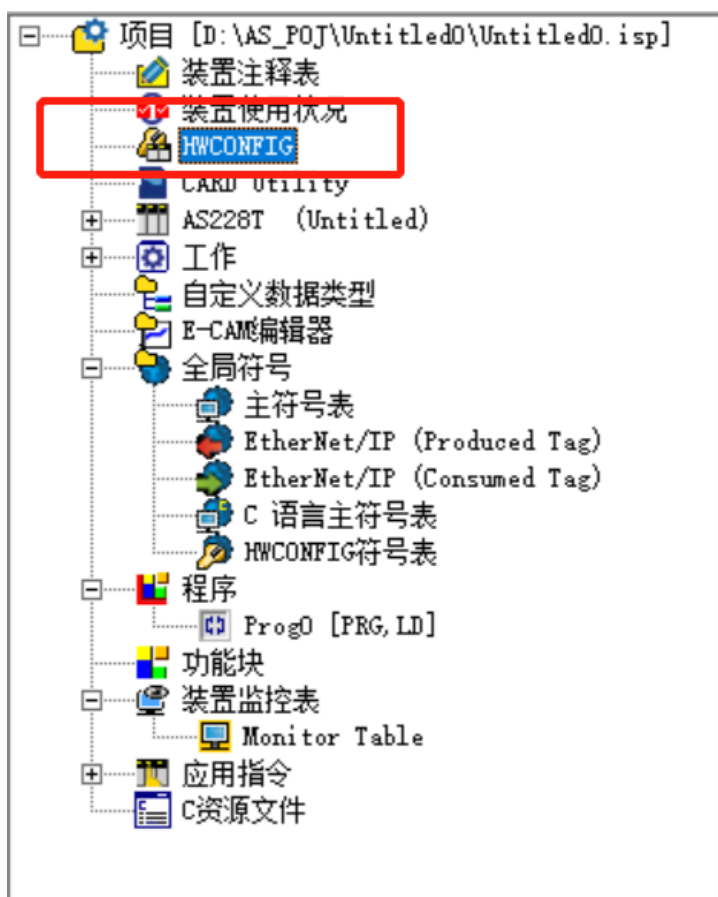


3. After opening the HWCONFIG window, double-click the PLC icon

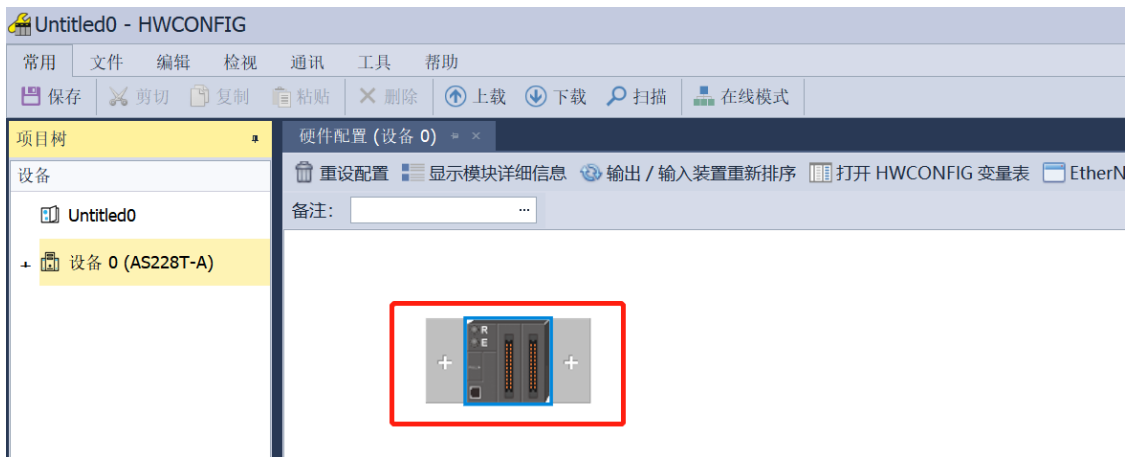

4. Click Device---General---COM1 Communication Interface Settings to set parameters such as baud rate and mode;

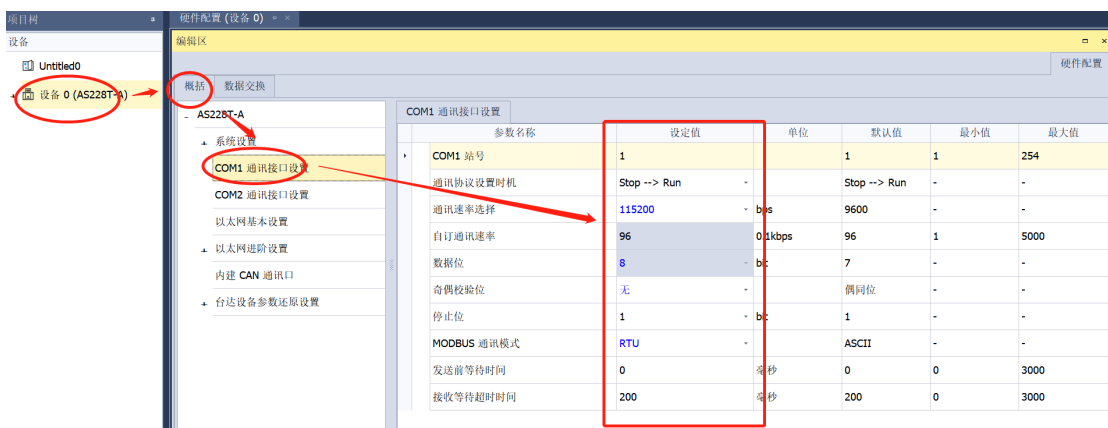

5. Click Device---Data Exchange---COM1, select Always Execute as the startup mode, and add the address to be controlled;

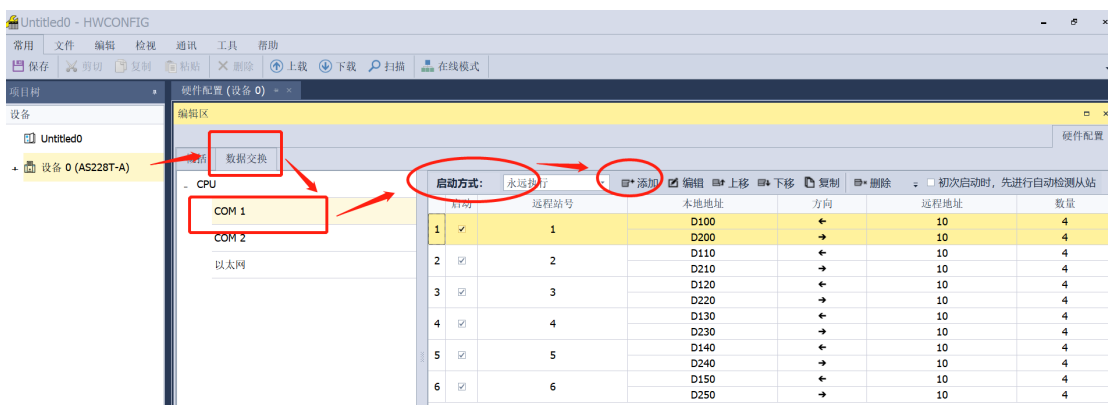

6. Select the added item and click "Edit" to make detailed settings;

启动方式: 永远执行 添加 编辑 上移 下移 复制 删除 初次启动时, 先进行自动检测从站						
	启动	远程站号	本地地址	方向	远程地址	数量
1	☒	1	D100	←	10	4
			D200	→	10	4
2	☒	2	D110	←	10	4
			D210	→	10	4
3	☒	3	D120	←	10	4
			D220	→	10	4
4	☒	4	D130	←	10	4
			D230	→	10	4
5	☒	5	D140	←	10	4
			D240	→	10	4
6	☒	6	D150	←	10	4
			D250	→	10	4
7	☐	1	D0	←	D0	1
			D0	→	D0	1

In the pop-up window, check "Start".

Update cycle time: needs to be adjusted according to the actual number of connected slaves. Generally, the more the number, the larger the value required;

Remote station number: fill in according to the module address dial;

Type: Select standard MODBUS driver;

Read: Configure the coil or register to be read, fill in according to the mapping table as needed, the local address is the control address of the PLC, and the remote address is the mapping address of the module. Note that the address here is hexadecimal, and the address in the mapping table is decimal and needs to be converted before filling in;

Write: Configure the coil or register to be written, fill in according to the mapping table as needed, the local address is the control address of the PLC, and the remote address is the mapping address of the module. Note that the address here is hexadecimal, **The address in the mapping table is in decimal and needs to be converted before filling in. The same coil can only use one writing method, coil method or register method. Configuring two methods at the same time will cause confusion.**

数据交换设置

☒ 启动

最短更新周期 (毫秒) **10** ☒ 应用至全部

连接超时 (毫秒) **100** ☒ 应用至全部

☐ 支持同步读写 (功能码: 0x17)

远程装置设置

远程站号 **1**

IP 地址

远程装置类型 **Standard Modbus Device**

读取

本地起始地址 D0 - D29999 远程起始地址 (Hex) 0 - FFFF 数量 (Bit)

D Register 0 0 ← 0x01 Read Coils 0 0 1

写入

本地起始地址 D0 - D29999 远程起始地址 (Hex) 0 - FFFF 数量 (Bit)

D Register 0 0 → 0x0F Write Multiple Coils 0 0 1

确定 取消

7. After all configurations are completed, click "Download" in the menu bar to download the configuration data to the PLC.

4 Appendix

4.1 Ordering Information

Product Order Code	Ordering code
FNI MBR-106-104-D64	009M91

■ High Quality Product / Sincere Service



경기도 성남시 중원구 사기막골로 124

SKn 테크노파크 메가동 303 호

E-mail: sales@creken.com www.creken.com



FAS / Factory Automation Solution
No. 33 Liuqiao Road, Shangjie Town,
Minhou County, Fujian Province
www.faselec.com